kaiboer®

Shenzhen Kaiboer Technology Co. LTD

www.kaiboerhd.com

kaiboer®

k660i

3D HD MEDIA PLAYER

Products introduction

Directory

Precaution before use

Main function and Accessories

Powerful codec/01
Rich interfaces/01
Packing list/01

Notes

Products Introduction

RC photo/04
Front panel/05
Back panel/05
Left panel/06
Right panel/06

Connection

TV connection/07
Amplifier connection/08
Network connection/10
Install hard disk/10

Usage of player

Setup/11-17
Update instruction/18
Network share/19-20
Others /21-22

After Services

Hardware Parameter

Vocabulary

Precautions before use

★To prevent fire, electronic shock and damage of product, please do not let the player come into contact with fain, moisture or liquid. Do not put vases or other water containers on the player.
★To ensure good ventilation, please do not put the player in bookcases, cabinet or other confined places. Keep well-ventilated to prevent fire or electronic shock caused by overheat of the player.
★Keep the lighted candle and other lighted subjects away from the player.
★Please do not open the case of the player. Only the specialist is allowed to do this

Placing

Please place the player on a flat area and keep it away from the sunlight and avoid heat, humidity and frequent shake. Otherwise it would damage the case and other components of the player and shorten the service life of the player.
For the best performance of the player, please do not place heavy subjects on the player and keep it at least 15cm away from the wall.

Power

Do not use over-voltage, otherwise the player would be damaged and might cause fire.
Please connect the powerline correctly and make sure the cable is not damaged.
Please unplug the power cord if you do not use the player for a long time to prevent damage caused by the thunder.

Clearing

Please unplug the power cord before cleaning the player. Please use a slightly-wet rag to clean the player instead of liquid detergent. Do not use solvents like gas, because this might damage the case of the player.

Moisture-proof

Please keep the player away from any humid places, like basement. Condensation of moisture might cause damage to the player. In case of this, please turn on the player and the heat of the player can drive the humidity away.

About the user manual

Please read the user manual carefully and keep the manual in safe place for use. The picture in this user manual might be different with the pictures shown on the TV. This might be caused by the different version of the software.

Service

Please do not try to repair the player by yourself. Unauthorized repair might cause dlectronic shock or damage of the player. If cases below appear, please contact your local distributor or the repair centre.

A.Unnormal picture or audio output
B.The AC adaptor or the power cord is damaged
C.Liquid or other things enter the inner parts of the player
D.The player comes into contact with rain or other liquid
E.The player is dropped or damaged by any other reason
F.The player operates anomalously

If any of the components needs to be replaced, please make sure the same and authorized components is used. Otherwise it might cause fire, electronic shock or other damages

Product introduction

Remote control

电源	POWER	⏏	EJECT
1.@	NUMBER	菜单	MENU
	ANDROID	静音	MUTE
AUDIO	AUDIO	+ VOL −	VOL+/-
⏮ ⏭	NEXT/LAST	HOME	HOME
RETURN	RETURN		
OK			
INFO	INFO	ME SEE	TIME SEEK
◀◀	REV	⏯	PLAY/PAUSE
■	STOP	▶▶	FWD
SUBTITLE	SUBTITLE	SLOW	SLOW
REPEAT	REPEAT	A-B	A-B
ZOOM	ZOOM	16:9	PROPORTION
SETUP	SETUP	TV MODE	TV MODE
		IMS	

Front panel

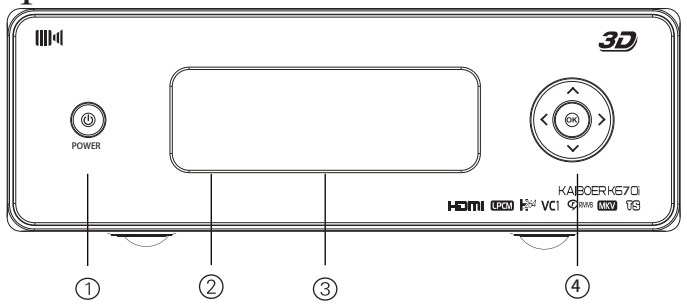

①	POWER	③	LED screen
②	Signal receiver	④	left/right/up/down/ok

Notice:
1.Please do not cover the remote control signal receiver.
2.Please do not put heavy subject or other liquid containers on the player.
3.Reboot the player again, pls wait 10 mins.

Rear panel

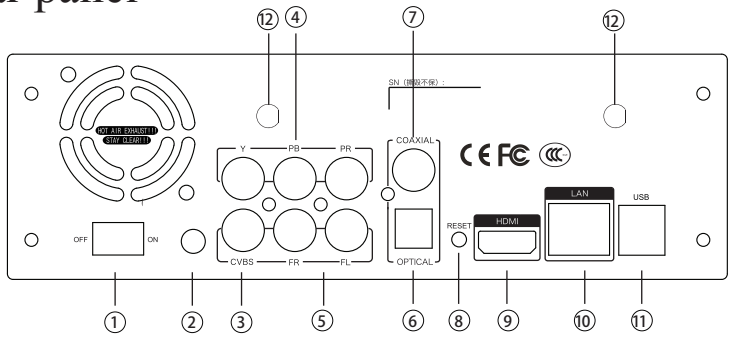

①	OFF/ON		⑦	COAXIAL	
②	12V		⑧	RESET	
③	CVBS		⑨	HDMI	
④	YPBPR		⑩	LAN	
⑤	FL/FR		⑪	USB-PC	
⑥	OPTICAL		⑫	Antenna	

Notice: When player is on, pls don't remove the HDMI cable.

Left panel

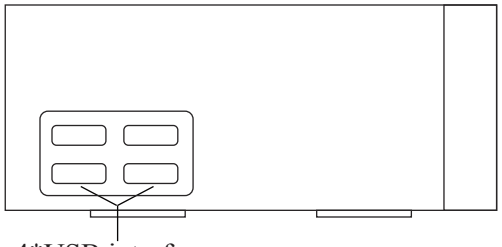

Right panel

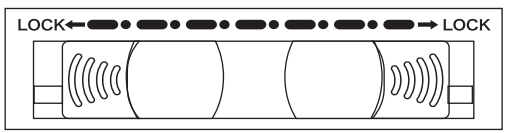

Built in 3.5” hard disk

Connection

TV connection

HDMI	HDMI	高清晰度：1080/24p、1080p、1080i、720p 标准清晰度：480p/576p、480i/576i
YPbPr	Y PB PR	高清晰度：1080i、720p 标准清晰度：480p/576p、480i/576i
CVBS	CVBS	标准清晰度：480i/576i

HDMI connection

HDMI can transfer video and audio signal at the same time.Max definition up to 1080p and lossless audio signal, 7.1 channels

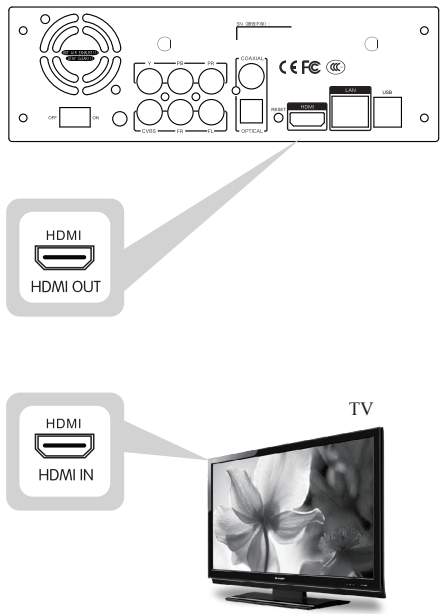

YPbPr and Composite connection

If there is no HDMI interfaces on your TV, please connect via YPbPr interface. Connect the YPbPr cable to the player and TV respectively according to the color:Red,Green,Blue.

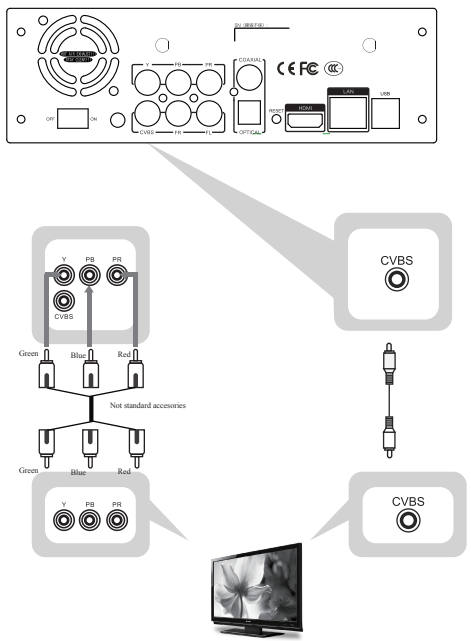

Amplifier connection

Three audio connect interfaces

HDMI	HDMI	High definition multimedia interface	Supports 7.1 audio system
COAXIAL/ OPTICAL	COAXIAL OPTICAL	Coaxial/optical	Supports 5.1 audio system
Audio	FL FR	FL/FR	Supports 2.1 audio system

HDMI connection indicating diagram

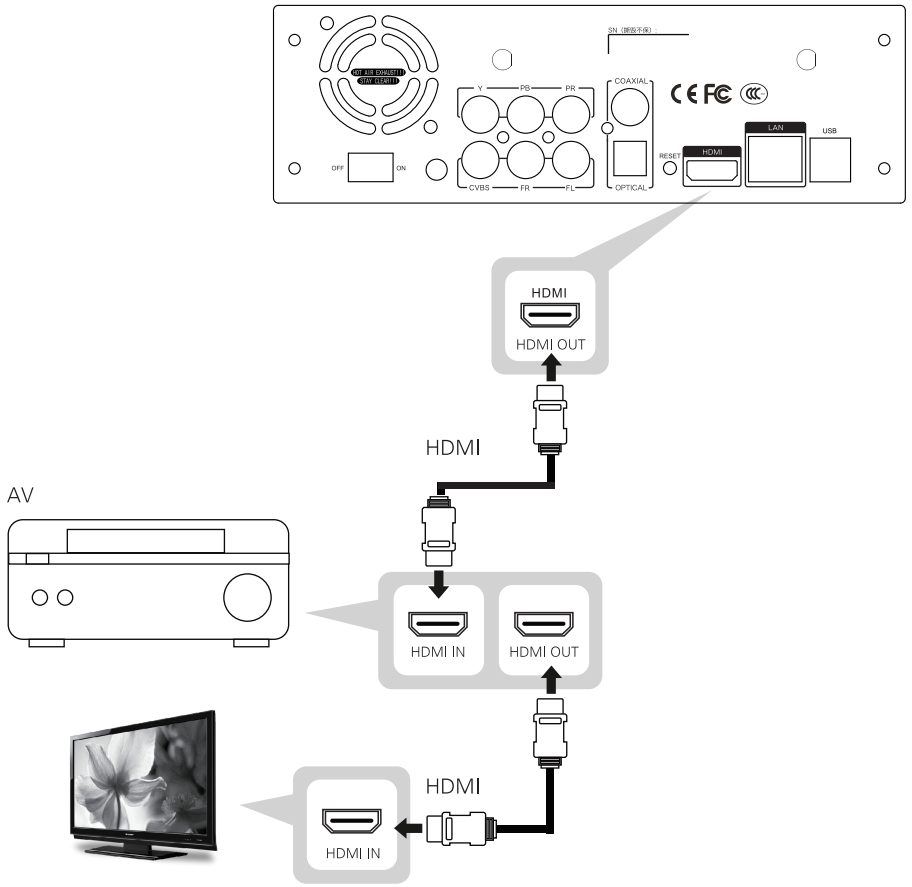

Coaxial and Optical connection indicating diagram

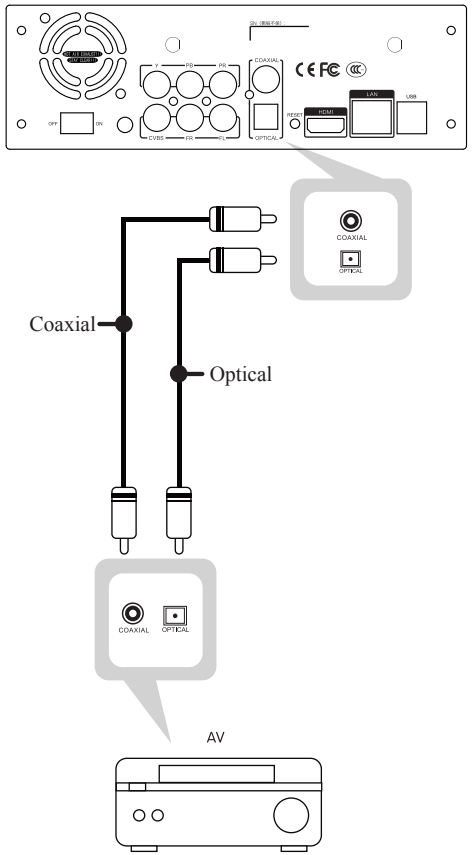

FL/FR connection indicating diagram

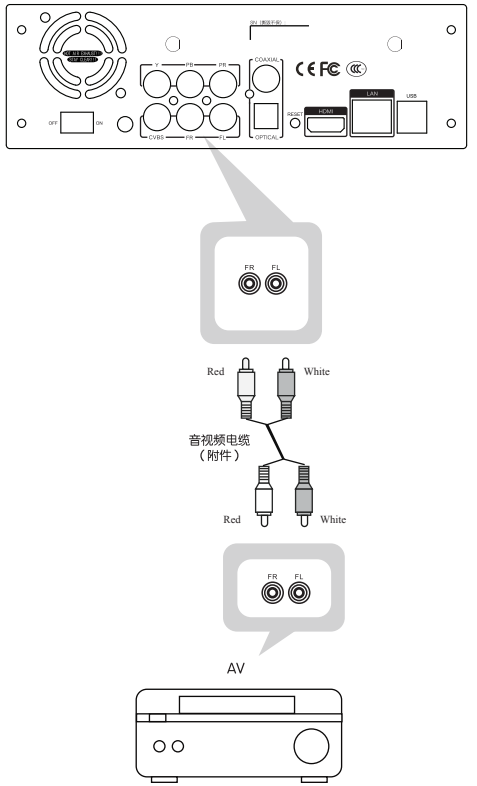

Network Connection

With gigabit lan, you can connect the player to the network in your home and visit the computer and NAS.
There are 2 ways to connect to the internet.

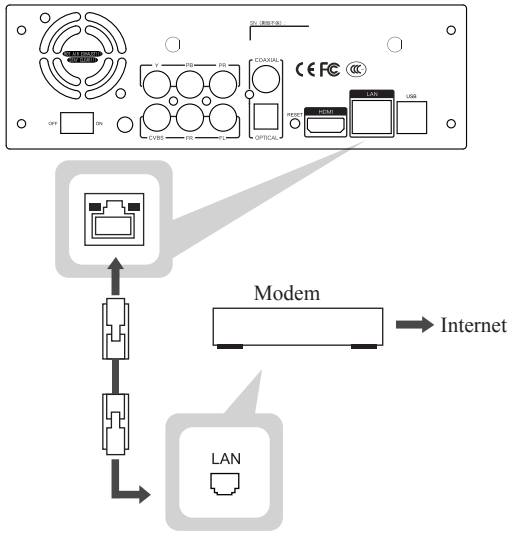

Wifi
The player has been built in wifi, convenient for clients contact wifi modem.

Install the HDD

The player can install a 3.5” HDD.
Notice:please turn off the player before installing a HDD.
Open the HDD bay cover and put HDD into the bay gently, then install it.

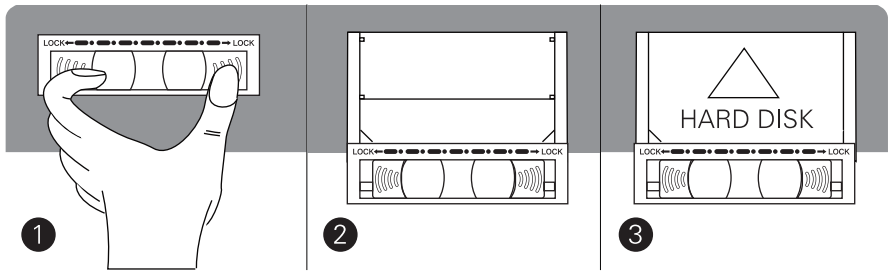

Setup

Main Memu

Set up

Menu	Description
File manage	Manage the file of the player
Media center	Play movies, music and view photo
Network	Online videos
Android	Android 2.2
Setup	Setting of audio, video and player

Note: The models of different version of firmware might be a little different.

System

Language

Text Encoding

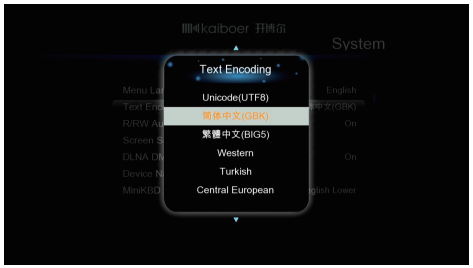

R/RW auto-player

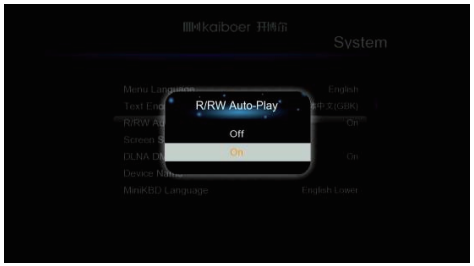

Choose “on/off”

Screen Saver

Support to choose the start-up time

DLNA DMR

Choose “on/off”

Mini Keyboard for name the device

Support Chinese and English

Scan Storage

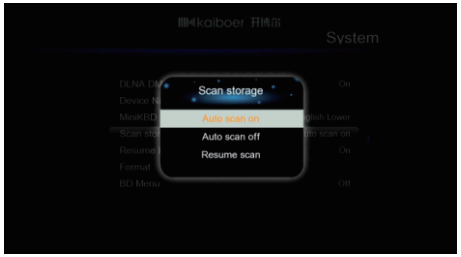

Resume Play

Format

Format screen

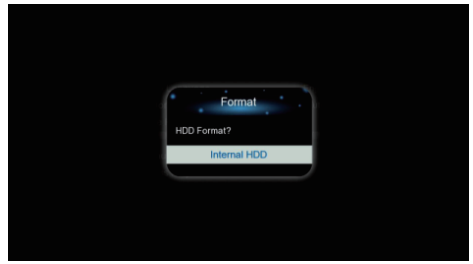

BD Menu

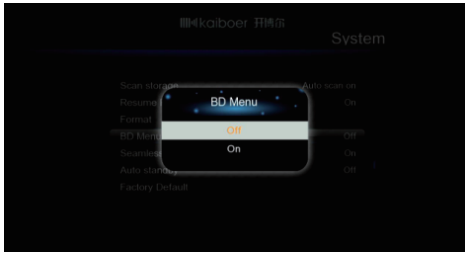

Choose “on/off”

Seamless Playback

Choose “on/off”

Factory Default

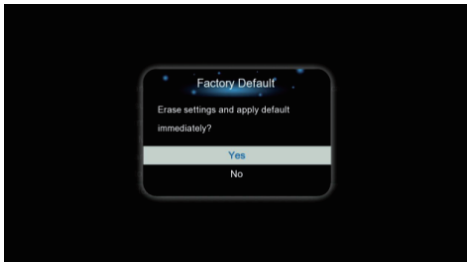

Audio Set-up

Night Mode

HDMI output

SPDIF Output

Surround Sound

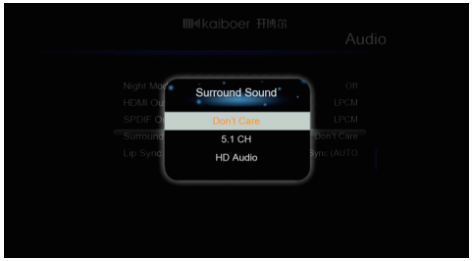

Video

Aspect Ratio

Support Pan scan4:3/Letter Box 4:3/16：9/16：10

TV System

**Support Auto,PAL,NTSC,480I50HZ,
480I60HZ,480P50HZ,480P60HZ,
576I50HZ,576I60HZ,576P50HZ,
576P60HZ,720I50HZ,720I60HZ,
720P50HZ,720P60HZ,1080I50HZ,
1080I60HZ,1080P 50HZ,
1080P 60HZ.**

Video Zoom

Choose “on/off”

1080P 24HZ

Deep Color

Support Auto/12bit/10bit/off

Network

Wired Lan Setup

1) Connect Router
2)Turn on DHCP of Router, k670i will get IP address automatically.

Turn on player-enter “system”-Network-Wired Lan Setup(below)

Choose DHCP IP(auto)-DNS(auto)-Save network setting?-Yes-Testing-Ok. It will show IP address, such as:192.168.xxx.xxx, Submask:255.255.255.0

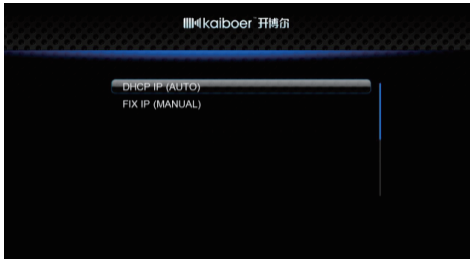

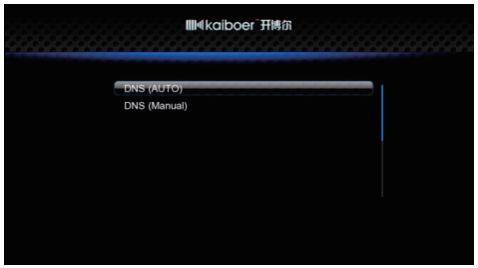

Wireless Lan Setup

Turn on player, player will search wifi atutomatically. Click “Zoom” button to search wifi signal-choose the suitable one-click “ok” button-Test-then connect sucessfully.

Turn on player-enter “system”-Network-Wireless Lan Setup(below)

Click “Zoom” to search the network

Input your key of wifi to connect.

Testing

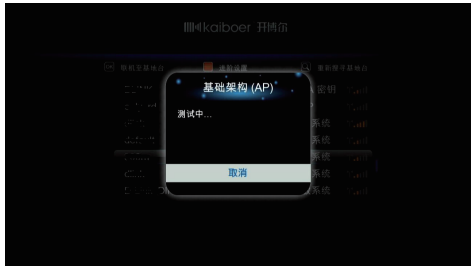

PPPOE

To connect wired and wireless

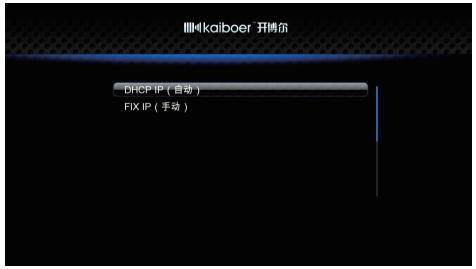

1）通过网线连接路由器。
2）设置菜单-网络-PPPOE拔号，输入用户名及密码，按OK连接。每一次启动K670i都必须按此按钮连接，K670i无手动断线功能，如果需要断线，必须关机。

网路资讯

USB update

Use Features

File Manage

Copy,delete,remove,rename the sources in device.

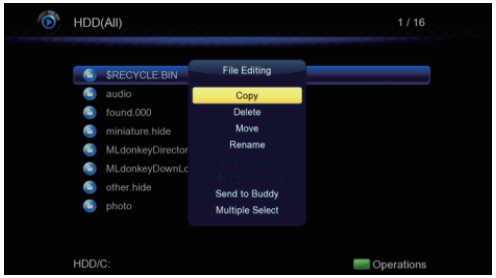

Media Center

Movie

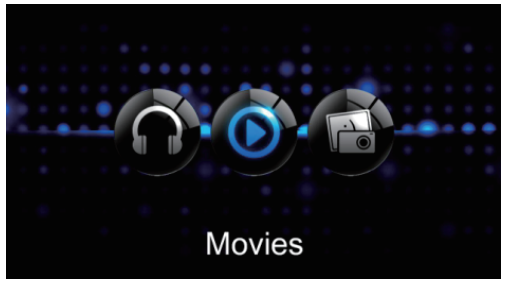

Music

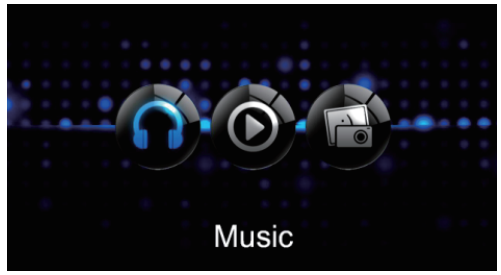

Photo

Premium App

Android

Android 2.2 OS, supporting many apps.(Need extra mouse and keyboard).

“Info” button

Click INFO button to check movie’s name, audio, chapter, volume, playback time, etc.

“AUDIO ” button

“Subtitle” button